

HODNOTY PRIETOKU VODOVODNÝCH BATÉRIÍ RAVAK

Prietok je udávaný v l/min pri tlaku 0,3MPa

RAVAK kód	Umývadlo	Bidet	Vaňa	Hlavová sprcha	Ručná sprcha	OUT 1	OUT 2	OUT 3
ES 012.XX	5							
ES 014.XX	5							
ES 015.XX	5							
ES 018.XX	5							
ES 019.XX.O1	5							
ES 019.XX.O1.RB07B	5							
ES 021.XX.O1			18					
ES 022.XX			20		20			
ES 032.XX					24			
ES 056.XX		5						
ES 061.XX.O2						19	22	
ES 062.XX.O1						22		
ES 063.XX.O2.RB07C						19	19	
ES 065.XX.O2.RB07D.+S					10		16	
ES 065.XX.O2.RB07E						12	12	
ES 067.XX.O3.RB07C						18	18	18
ES 068.XX.O3.RB07D.+S					10		17	16
ES 068.XX.O3.RB07F						22	22	22
ES 080.XX			13		10			
ES 091.XX				10	13			
EL 012.XX	5							
EL 014.XX	5							
EL 015.XX	5							
EL 019.XX.O1.RB07B	5				25			
EL 022.XX			13		22			
EL 032.XX			25					
EL 056.XX		5						
EL 061.XX.O2						18	21	
EL 062.XX.O1						25		
EL 065.XX.O2.RB07D.+S					10		18	
EL 065.XX.O2.RB07E						12	12	
EL 068.XX.O3.RB07D.+S					10		17	18
EL 068.XX.O3.RB07F						22	22	22
PU 014.XX	12							
PU 015.XX	12							
PU 016.XX	12							
PU 019.XX	15							
PU 022.XX			19		11			
PU 022.X1			19		19			
PU 026.XX			21		9			
PU 032.XX					23			
PU 033.00					22			
PU 055.XX		12						

HODNOTY PRIETOKU VODOVODNÝCH BATÉRIÍ RAVAK

Prietok je udávaný v l/min pri tlaku 0,3MPa

RAVAK kód	Umývadlo	Bidet	Vaňa	Hlavová sprcha	Ručná sprcha	OUT 1	OUT 2	OUT 3
FL 013.XX	12							
FL 014.XX	12							
FL 016.XX	13							
FL 022.XX			21		24			
FL 026.XX			18		11			
FL 032.XX					22			
FL 055.XX		12						
FL 065.XX						25	25	
FL 066.XX						25		
FL 080.XX			18		13			
FL 091.XX				16	10			
FL 112.XX	7	5						
TE 023.XX			21		22			
TE 033.XX					24			
TE 072.XX					23			
TE 082.XX			21		26			
TE 091.XX				19	12			
TE 092.XX			17	12	10			
TE 093.XX				14	11			
TE 092.X1			17	12	10			
TE 093.X1				14	11			
TE 094.XX				16	8			
TD F 012.XX	5							
TD F 014.XX	5							
TD F 015.XX	5							
TD F 022.XX			19		21			
TD F 032.XX					21			
TD F 033.XX					21			
TD F 055.XX		14						
TD F 061.XX						22	21	
TD F 065.00						21	21	
TD F 066.XX						22		
TD F 091.XX				14	11			
TD 012.XX	5							
TD 014.XX	5							
TD 015.XX	5							
TD 022.XX			19		21			
TD 032.XX					21			
TD 033.XX					22			
TD 055.XX		14						
TD 061.XX						22	21	
TD 065.XX						21	21	
TD 066.XX						22		
TD 091.XX				14	11			
CL 011.XX	11							
CL 012.XX	11							
CL 016.XX	7							
CL 022.XX			15		16			
CL 032.XX					17			
CL 055.XX		10						
CL 061.XX						22	23	
CL 065.00						20	20	
CL 066.00						20		

HODNOTY PRIETOKU VODOVODNÝCH BATÉRIÍ RAVAK

Prietok je udávaný v l/min pri tlaku 0,3MPa

RAVAK kód	Umývadlo	Bidet	Vaňa	Hlavová sprcha	Ručná sprcha	OUT 1	OUT 2	OUT 3
CR II 014.XX	4							
CR II 015.XX	4							
CR II 022.XX			21		20			
CR 025.XX			16		11			
CR II 032.XX					23			
CR II 056.XX		9						
CR II 063.XX.O2.RB071						20	20	
CR II 065.XX.O2.RB070						19	19	
CR II 067.XX.O3.RB071						20	20	20
CR 080.XX			19		14			
CR II 112.XX	4				5			
CR II 014.X2	4,5							
CR II 015.X2	4,5							
CR II 019.XX.01	4,5							
CR II 026 .XX			20		12,5			
CR II 080.XX.RB07A			25		11			
RS 025.00			19		12			
FM 016.00	18							
FM 080.00			16		12			
FM 080.XX.RB07A			16		12			
FM 082.XX.RB07A			18		12			
BM 011.X1	11				6			
BM 040.X1					9			
DS 091.00				15	8			
DS 092.00				15	8			
LF 012.XX	4							
LF 014.XX	4							
LF 015.XX	4							
LF 022.XX			20		20			
LF 032.XX					23			
LF 056.XX		4						
SL 012.XX	4							
SL 014.XX	4							
SL 015.XX	4							
SL 022.XX			13		18			
SL 032.XX					20			
SL 056.XX		4						
SG 012.xx	4,5							
SG 014.xx	4,5							
SG 015.xx	4,5							
SG 019.xx	4,5							
SG 022.xx			17		18			
SG 032.xx					18			
SG 065.xx.O2.RB072						22	23,5	
SG 065.xx.O2.+S					12	17,5		
SG 080.xx.RB07A			19,5		14			
SG 091.xx				10,5	13,5			

HODNOTY PRIETOKU VODOVODNÝCH BATÉRIÍ RAVAK

Prietok je udávaný v l/min pri tlaku 0,3MPa


RAVAK kód	Umývadlo	Bidet	Vaňa	Hlavová sprcha	Ručná sprcha	OUT 1	OUT 2	OUT 3
PN 014.xx	4,5							
PN 015.xx	4,5							
PN 022.xx			21,5		22			
PN 032.xx					22,5			
PN 061.xx.O2						22	22,5	
NX 014.xx	4,5							
NX 015.xx	4,5							
NX 022.xx			19		21			
NX 032.xx					22,5			
CL II 012.00CR	4							
CL II 014.00CR	4							
CL II 022.00CR			14,5		19			
CL II 032.00CR					21			
CL II 016.00CR	15							
RV 012.00CR	5							
RV 014.00CR	5							
RV 015.00CR	5							
RV 022.00CR			18		19			
RV 032.00CR					20			
RV 056.00CR		5						




ES 019.XX.O1
ES 021.XX.O1



 
OUT 1
Hot Cold
ES/EL 062.XX.O1

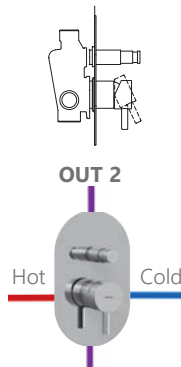

OUT 2
Hot Cold
OUT 1
ES/EL 061.XX.O2
TD / TD F / CL: 061.XX

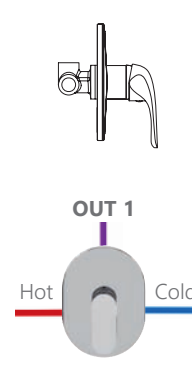 

OUT 1
Hot Cold
CR 064.00

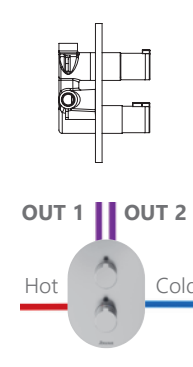 

OUT 1 OUT 2
Hot Cold
CR 063.XX



RB 07B.50



ES/EL 019.00.O1.RB07B




RB 07C.50




ES 063.XX.O2.RB07C ES 067.XX.O3.RB07C



 RB 07D.50

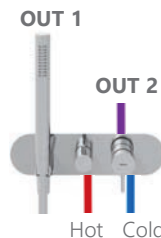


ES/EL 065.XX.O2.RB07D.+S

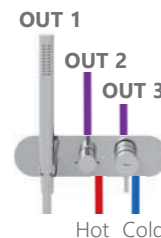 

ES/EL 068.XX.O3.RB07D.+S



 
RB 07E.50

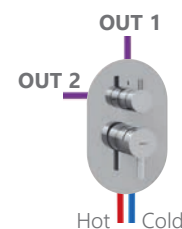

ES/EL 065.XX.O2.RB07E




 RB 07F.50

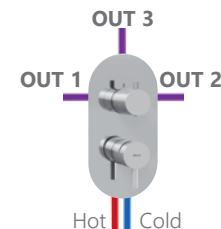


ES/EL 068.XX.O3.RB07F

 RB 070.50

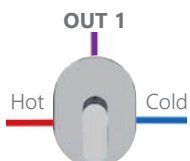


CR / TD / TD F / CL: 066.XX

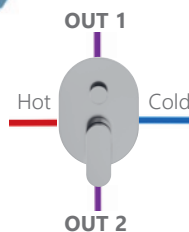 


CR / TD / TD F / CL: 065.XX

 RB VARI 072.50

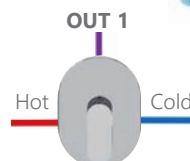


FL 066.XX

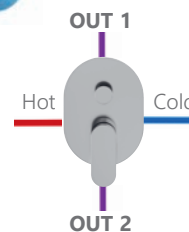 

FL 065.XX

 RB Multi 071.50

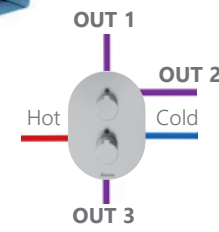


CR 067.00

RB 07A.50



FM 080, 081, 082, CR 080, FL 080

 RB 07G.50

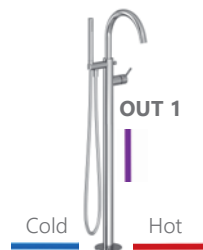

ES 080.XX